

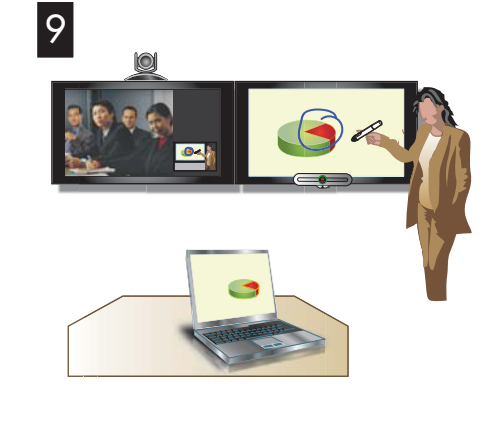
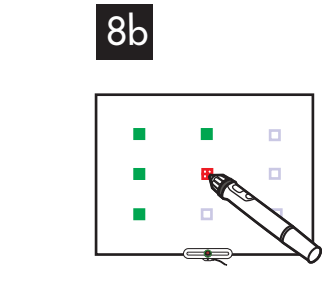
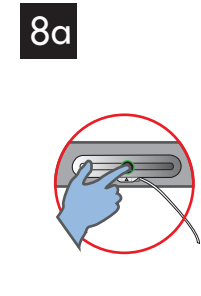
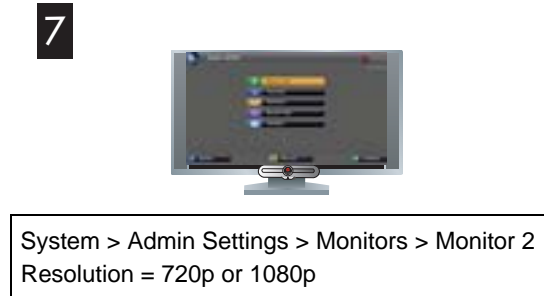
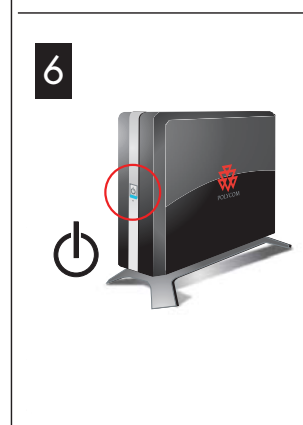
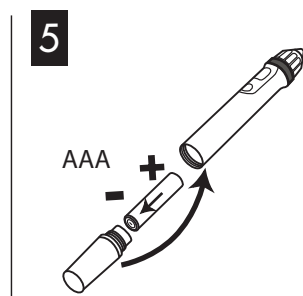
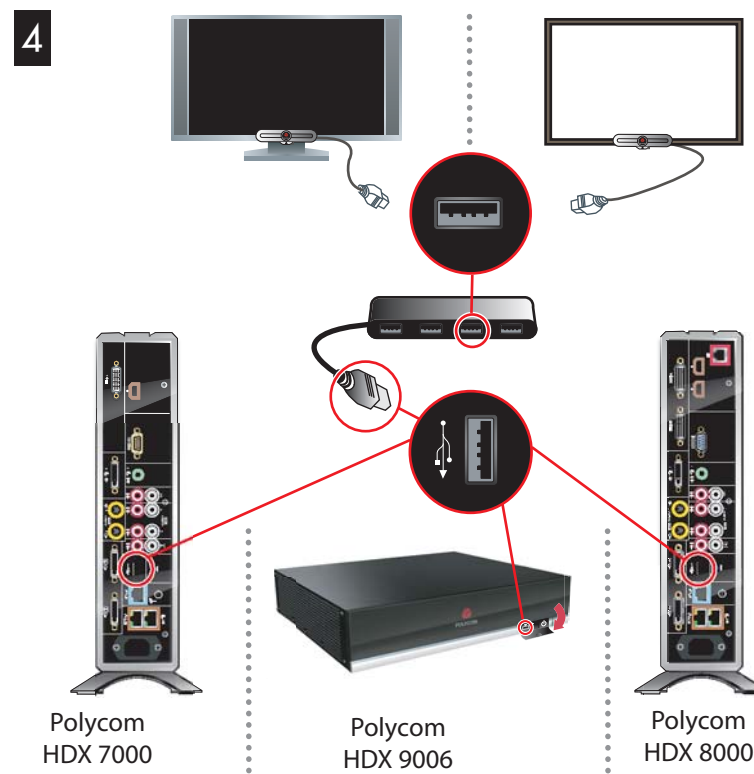
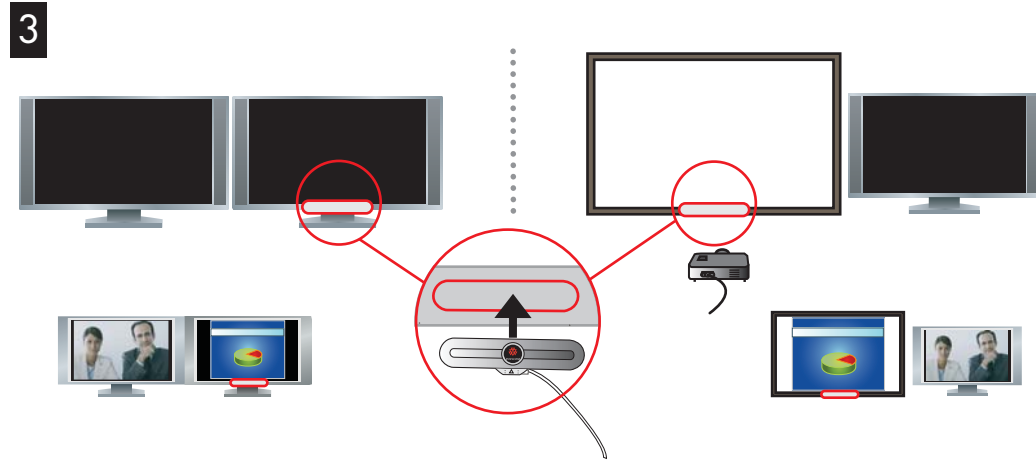
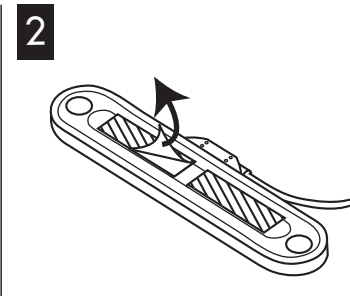


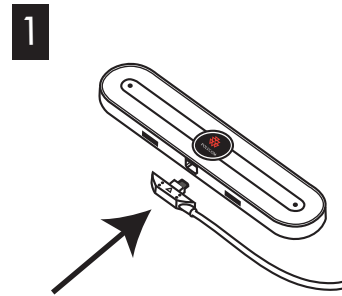

Quick Start Guide for the Polycom[®] UC Board[™]

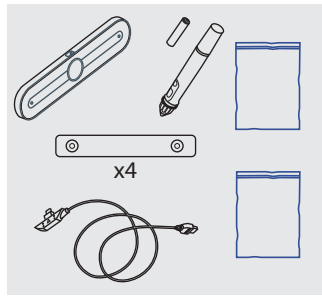

Product Documentation

Documentation du produit	Termékdokumentáció
Documentación del producto	Dokumentacija produktu
Documentação do produto	Документация продукта
Produktdokumentation	製品マニュアル
Documentazione del prodotto	产品文档
Produktdokumentasjon	產品說明文件
	제품 설명서

support.polycom.com



The Polycom UC Board enables you to annotate content by using either a second monitor or a whiteboard and projector. You can easily share the results with other participants in a call.

Hardware and Software Requirements


These requirements and recommendations are based on test scenarios. Your system's performance may vary based on your hardware configuration.

Polycom HDX system software	Version 3.0.3 or later
Polycom HDX systems	Dual-monitor installation with Monitor 2 configured as content. Attach the content monitor to Video Output 2. <ul style="list-style-type: none"> HDX 7000 HD system with Hardware Version C HDX 8000 HD system with Hardware Version B HDX 9006 system
Monitor	<ul style="list-style-type: none"> LCD with LED backlighting 40" – 50" (101 cm – 127 cm) Glass screen
Projector and whiteboard	Recommended whiteboard work area: 17" x 11" (43 cm x 28 cm) to 108" x 60" (275 cm x 152 cm)

1725-63823-002/A



Copyright © 2011, Polycom, Inc. All rights reserved. Polycom® and the Polycom logo are registered trademarks of Polycom, Inc. Polycom HDX® and Polycom UC Board™ are trademarks of Polycom, Inc. Some graphics © Luidia, Inc. 2007.

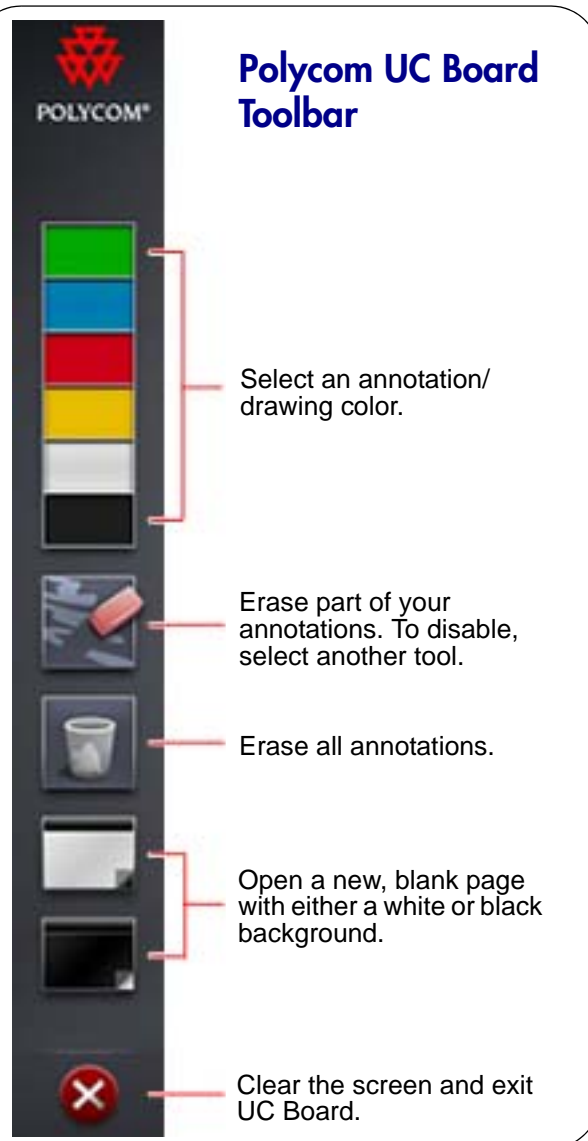

To Start UC Board

Do one of the following:

- Begin drawing with the stylus.
- Tap the monitor or whiteboard with the stylus.

To Exit UC Board

- Tap on the toolbar.

To Clear Content and Annotations

When you perform the following actions, your content and annotations are cleared from the screen:

- Answer a call.
- Open a new page with a different background color.

In addition, when a far-end UC Board user in the call taps the monitor or whiteboard, sends content, or otherwise performs an action that can start UC Board, content and annotations are cleared from your screen.

Troubleshooting

If you experience problems, try these possible solutions.

- Ensure that the stylus is correctly assembled. The buttons on the stylus are reserved for future use.
 - Verify that the battery is inserted correctly and is generating power.
 - If you use the hand strap, be sure to replace the rubber ring on the stylus with the rubber ring included in the hand strap packet.
- Verify that the green indicator light on the receiver is glowing.
- Ensure that the cable connecting the receiver and USB hub to the HDX system is securely attached at both ends.
- Check **System > Diagnostics > System Status** on the HDX system (**System > HDX System** on the Polycom Touch Control) to verify that the UC Board is running.
- Draw a box approximately 1/2" (2 cm) from the edge around the perimeter of the monitor. If the lines are corrupted, move the receiver to the center of the top or side of the monitor. Draw the box to test again.
- If the receiver was moved, you may need to calibrate the system again. Press on the receiver to display the calibration screen.
- Fluorescent lighting, direct sunlight, and ultrasonic motion sensors can interfere with the receiver. Try improving these situations by using different room lighting, moving the monitor or whiteboard, temporarily blocking sensors, or darkening the room.
- Restart the HDX system.

For more information about configuring HDX systems, refer to the *Administrator's Guide for Polycom® HDX® Systems*.

Caution: To Maintain Stylus Nibs

Wipe the nib of the stylus often with a clean, soft cloth to remove possible debris. To avoid damaging the monitor or whiteboard, replace the nib when the point wears down.